	CARDINAL SURVEYS COMPANY Safety Management System		Doc No:	CRANES
			Initial Issue Date:	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.:	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 1 of 16

## Purpose

Overhead cranes, hoists, and rigging equipment are used by CARDINAL SURVEYS COMPANY employees for lifting and moving materials. In order to maintain a safe workplace for its employees, only qualified individuals shall operate these devices. This program outlines the procedures for safe operations and the training requirements regarding overhead cranes, hoists and rigging equipment.

## Scope

Applies to all CARDINAL SURVEYS COMPANY employees who operate overhead cranes, hoists, and rigging equipment in the scope of their job duties and assignments. When work is performed on a non-owned or operated site, the operator's program shall take precedence, however, this document covers CARDINAL SURVEYS COMPANY employees and shall be used on owned premises, or when an operator's program doesn't exist or is less stringent.

## Definitions

ANSI - the American National Standards Institute.

Appointed - assigned specific responsibilities by the employer or the employer's representative.

Auxiliary hoist - a supplemental hoisting unit of lighter capacity and usually higher speed than provided for the main hoist.

Brake - a device used for retarding or stopping motion by friction or power means.

Bridge - that part of a crane consisting of girders, trucks, end ties, foot-walks, and drive mechanism that carries the trolley or trolleys.

Bridge travel - the crane movement in a direction parallel to the crane runway.


Bumper [buffer] - an energy absorbing device for reducing impact when a moving crane or trolley reaches the end of its permitted travel; or when two moving cranes or trolleys come in contact.

Crane - a machine for lifting and lowering a load and moving it horizontally, with the hoisting mechanism an integral part of the machine. Cranes, whether fixed or mobile, are driven manually or by power.

Designated - selected or assigned by the employer or the employer's representative as being qualified to perform specific duties.

Drum - the cylindrical member around which the ropes are wound for raising or lowering the load.

Emergency stop switch - a manually or automatically operated electric switch to cut off electric power independently of the regular operating controls.

	CARDINAL SURVEYS COMPANY Safety Management System		Doc No:	CRANES
			Initial Issue Date	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 2 of 16

Floor-operated crane - a crane which is pendant or nonconductive rope controlled by an operator on the floor or an independent platform.

Hoist - an apparatus that may be a part of a crane, exerting a force for lifting or lowering.

Holding brake - a brake that automatically prevents motion when power is off.

Limit switch - a switch that is operated by some part or motion of a power-driven machine or equipment to alter the electric circuit associated with the machine or equipment.

Load - the total superimposed weight on the load block or hook.

Load block - the assembly of hook or shackle, swivel, bearing, sheaves, pins, and frame suspended by the hoisting rope.

Main hoist - the hoist mechanism provided for lifting the maximum rated load.

Main switch - a switch controlling the entire power supply to the crane.

Overhead crane - a crane with a movable bridge carrying a movable or fixed hoisting mechanism and traveling on an overhead fixed runway structure.

Rated load - the maximum load for which a crane or individual hoist is designed and built by the manufacturer and shown on the equipment nameplate(s).

Rope - refers to wire rope, unless otherwise specified.

Runway - an assembly of rails, beams, girders, brackets, and framework on which the crane or trolley travels.

Side pull - that portion of the hoist pull acting horizontally when the hoist lines are not operated vertically.


Span - the horizontal distance center to center of runway rails.

Standby crane - a crane which is not in regular service but which is used occasionally or intermittently as required.

Stop - a device to limit travel of a trolley or crane bridge. This device normally is attached to a fixed structure and normally does not have energy absorbing ability.

Trolley - the unit that travels on the bridge rails and carries the hoisting mechanism.

Trolley travel - the trolley movement at right angles to the crane runway.

	CARDINAL SURVEYS COMPANY Safety Management System		Doc No:	CRANES
			Initial Issue Date	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 3 of 16

Wall crane - a crane having a jib with or without trolley and supported from a sidewall or line of columns of a building. It is a traveling type and operates on a runway attached to the sidewall or columns.

## Key Responsibilities


---

### Managers and Supervisors

- Are responsible to ensure that employees and contractors are trained and qualified on the proper operations and have been trained in crane and hoist safety.
- Shall ensure modifications or additions that may affect the capacity or safe operation of the equipment must not be made without written approval from the manufacturer or approval from a registered professional engineer. The manufacturer must approve all modifications/additions in writing. A registered professional engineer must be qualified with respect to the equipment involved and must ensure the original safety factor of the equipment is not reduced.
- Shall ensure all manufacturer procedures applicable to the operational function of equipment must be complied with.
- Are responsible to see that all provisions of this program are followed and that crane inspections are performed and the equipment is in safe operating condition.
- Are responsible for identifying hazard areas by marking the boundaries of the crane swing radius with warning lines, railings or similar barriers or other safety measures to be used when the equipment has the potential to strike and injure an employee or pinch/crush an employee against any other object.

### Employees

- Employee operators are responsible to follow the requirements of this program and report any damage or needed repairs immediately to their supervisor.
- Operators must meet the physical qualifications, pass a physical, a written examination, understand and be able to use a load chart as well as calculate loads for the crane type operated.
- Employees designated as crane operators are responsible for the entire lift. In addition, crane operators are responsible to:
  - Make the required inspections,
  - Ensure that the crane is maintained,
  - Ensure that all personnel working in the area around the crane are kept clear of all hazards related to crane operations.
  - Determine the weights, and correct rigging required for loads to be lifted.

	CARDINAL SURVEYS COMPANY Safety Management System		Doc No:	CRANES
			Initial Issue Date	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 4 of 16

## Procedure

---

### General

CARDINAL SURVEYS COMPANY shall comply with the manufacturer's specifications and limitations applicable to the operation of any and all cranes. Where manufacturer's specifications are not available, the limitations assigned to the equipment shall be based on the determination of a qualified engineer competent in this field and such determinations will be appropriately documented and recorded. Attachments used with cranes shall not exceed the capacity, rating, or scope recommended by the manufacturer.


- This program applies to all cranes including overhead cranes, wall cranes, (jib cranes) and others having the same fundamental characteristics.
- CARDINAL SURVEYS COMPANY shall permit only those employees qualified by training or experience to operate equipment and machinery. Manufacturer rated load capacities and operating speeds shall be followed.
- All cranes in service and utilized by CARDINAL SURVEYS COMPANY shall meet, as a minimum, the design specifications of the American National Standard Safety Code for Overhead and Gantry Cranes, ANSI B30.2.0-1967.
- Each crane shall have the load rating plainly marked on each side of the crane. Rated load capacities, and recommended operating speeds, special hazard warnings, or instruction, shall be conspicuously posted on all equipment. Instructions or warnings shall be visible to the operator while he is at the control station. If the crane has more than one hoisting unit, each hoist shall have its rated load marked on it or its load block and this marking shall be clearly legible from the ground floor.
- All cranes shall be locked and tagged out while repairs are in progress to them or any other equipment or building structure that may have personnel or equipment in their path.
- Whenever internal combustion engine powered equipment exhausts in enclosed spaces, test shall be made and recorded to see that employees are not exposed to unsafe concentrations of toxic gases or oxygen deficient atmospheres.

### Inspections Onshore/Offshore

Cranes and hoists that have been overloaded shall be inspected prior to being returned to service. The inspection and testing requirements are included.

Initial inspection and test shall be performed by a qualified third party.

- Prior to initial use all new and altered cranes shall be inspected and tested to ensure compliance with the provisions of 29 CFR1910.179 and ABSI B30.2.
- Only after determining, by this inspection, testing and proper documentation, that the crane is in safe operating condition, shall it be put into service.

	<b>CARDINAL SURVEYS COMPANY</b> Safety Management System		Doc No:	CRANES
			Initial Issue Date	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 5 of 16

CARDINAL SURVEYS COMPANY shall designate a competent person who shall inspect all machinery and equipment prior to each use, and during use, to make sure it is in safe operating condition. Any deficiencies shall be repaired, or defective parts replaced, before continued use. Daily pre-use inspections shall be performed by the crane operator (designated as CARDINAL SURVEYS COMPANY's designated competent person) prior to beginning shift and through observation during normal operation. Daily inspections shall include:

- Any deficiencies shall be repaired, or defective parts replaced, before continued use.
- All functional operating mechanisms for maladjustment interfering with proper operation.
- Deterioration or leakage in lines, tanks, valves, drain pumps, and other parts of air or hydraulic systems.
- Hooks, if deformations or cracks are found the hook shall be tagged out of service until repaired and tested by qualified personnel.
- Hoist chains, including end connections, for excessive wear, twist, distorted links interfering with proper function, or stretch beyond manufacturer's recommendations.

Quarterly and annual inspections shall be documented with a certification record which includes the signature of the qualified third party (person or agency) who performed the inspection, the date, and identifier (serial number, unit number, etc.) for each piece of equipment. If safety hazards are found during inspections, the equipment in question shall be tagged out and not used until repairs are made. Any deficiencies constituting a safety hazard shall cause the equipment to be tagged out of service until repairs are made.

A thorough, annual inspection of the hoisting machinery shall be made by a competent person, or by a government or private agency recognized by the U.S. Department of Labor. CARDINAL SURVEYS COMPANY shall maintain a record of the dates and results of inspections for each hoisting machine and piece of equipment.

All crawler, truck, or locomotive cranes in use shall meet the applicable requirements for design, inspection, construction, testing, maintenance and operation as prescribed in the ANSI B30.5-1968, Safety Code for Crawler, Locomotive and Truck Cranes. However, the written, dated, and signed inspection reports and records of the monthly inspection of critical item prescribed in section 5-2.1.5 of the ANSI B30 5-1968 standard are not required. Instead, CARDINAL SURVEYS COMPANY shall prepare a certification record which includes the date the crane items were inspected; the signature of the person who inspected the crane items; and a serial number, or other identifier, for the crane inspected.


### **Crane Operator Certification/Qualification**

Only qualified personnel shall operate cranes and equipment covered by this program. Only those employees qualified by training or experience shall be allowed to operate equipment and machinery.

Within 4 years of November 8th 2010 CARDINAL SURVEYS COMPANY must ensure operators must be qualified/certified by one of the following methods:

#### Certification by an Accredited Crane Operator Testing Organization

- Accredited by a nationally recognized accrediting agency
- Certification is portable

	CARDINAL SURVEYS COMPANY Safety Management System		Doc No:	CRANES
			Initial Issue Date	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 6 of 16

- Valid for five years
- Program must be reviewed by a nationally recognized accrediting agency every three years

Qualification by an Audited Employer Program

- Developed or approved by an auditor certified by an accredited crane operator testing organization
- Auditor is not an employee of CARDINAL SURVEYS COMPANY
- Tests should be administered per nationally recognized test administration standards
- Program shall be audited within the first three months, then once every three years
- Qualification is not portable and valid for five years

Qualification by the U.S. Military

Licensing by a Government Entity

- Must meet or exceed requirements of the OSHA standard
- Valid only within the jurisdiction of the government entity
- Valid for time specified by the government entity, but no longer than five years

**Certification/Qualification Criteria**

Pass written test that include:

- Controls and operational performance
- Ability to calculate the load/capacity
- Procedures for power line contact
- Site preparation
- Ability to read manuals/charts relevant to the equipment being operated

Pass practical examination

Ability to perform a pre-shift inspection


Operational and maneuvering skills

Application of load chart information

Application of safe shut down and securing procedures

**Administrative Criteria**

- CARDINAL SURVEYS COMPANY must revoke operator's certification if they have reason to believe the employee is not qualified to operate.
- The current training records must be on file during the operator's employment.

	CARDINAL SURVEYS COMPANY Safety Management System		Doc No:	CRANES
			Initial Issue Date:	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.:	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 7 of 16

### Rigger Qualifications

Riggers assemble, rig, hook and unhook, guide, and disassemble crane equipment and materials. Riggers must meet the requirements of a qualified person. A qualified rigger is a person who, by possession of a recognized degree, certificate, or professional standing, or who by extensive knowledge, training, and experience, successfully demonstrates the ability to resolve problems relating to the subject matter, the work, or the project.

Riggers must be trained in all the requirements of the regulations that apply to their respective roles. For example, riggers must be trained and qualified to perform assembly and disassembly operations when their job tasks require them to perform such operations. Assembly and disassembly of equipment must follow the manufactures instructions and prohibitions.

CARDINAL SURVEYS COMPANY does not operate cranes that require assembly and disassembly on the jobsite. But as noted above, if this procedure is required by COMPANY personnel then the qualified crane operator will oversee assembly and disassembly on the job site and refer to the manufactures instructions and prohibitions to verify that the trained rigger complies with regulations stipulated in the manufacture's instructions.

### Signal Person Qualifications


All signal persons must be qualified to give signals. In order to be qualified, the signal person must:

- Know and understand the type of signals used; if hand signals are used, the signal person must know and understand the Standard Method for hand signals.
- Be competent in the application of the type of signals used.
- Have a basic understanding of equipment operation and limitations, including the crane dynamics involved in swinging and stopping loads and boom deflection from hoisting loads.
- Know and understand the regulatory requirements for signals (29 CFR 1926.1419 to 1926.1422) and the signal person qualifications (29 CFR 1926.1428).
- Demonstrate that he or she meets the qualification requirements for signalers through an oral or written test and through a practical test.

### Signal Person Evaluations

The qualification of signal persons must be evaluated and documented by either:

- A third party qualified evaluator, *or*
- The employer's qualified evaluator (i.e., an employee competent in accurately assessing whether the signaler has met the qualification requirements)

	CARDINAL SURVEYS COMPANY Safety Management System		Doc No:	CRANES
			Initial Issue Date:	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.:	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 8 of 16

### Signal Person Refresher Training

If subsequent actions by the signal person indicate that the individual does not meet the Qualification Requirements, CARDINAL SURVEYS COMPANY must not allow the individual to continue working as a signal person until retraining is provided and a reassessment is made that confirms that the individual meets the Qualification Requirements.

### Documentation of Signaler Qualification

CARDINAL SURVEYS COMPANY must make the documentation for whichever option is used available at the site while the signal person is employed by CARDINAL SURVEYS COMPANY. The documentation must specify each type of signaling (e.g. hand signals, radio signals) for which the signal person meets the requirements of the rule.

### Authority to Stop Operations

The operator has the authority to stop and refuse to handle loads whenever there is a safety concern. Whenever there is a safety concern, the operator must have the authority to stop and refuse to handle loads until a qualified person has determined that safety has been assured on the jobsite. Also any CARDINAL SURVEYS COMPANY EMPLOYEE has the authority to STOP WORK if the employee sees anything that they perceive to be a possible hazard on the jobsite and work will not continue until the hazard has been mitigated and documented.


### Ground Conditions

Cranes must not be used unless ground conditions are able to support the equipment and any supporting materials per the manufactures specifications. CARDINAL SURVEYS COMPANY (controlling entity) will ensure that equipment must not be assembled or used unless ground conditions are firm, drained and graded to a sufficient extent so that , in conjunction (if necessary) with the use of supporting materials, the equipment manufacture's specifications for adequate support and degree of level of the equipment are met.

### Overhead Power Lines in Crane Operations

- No part of crane, line or load may be able to reach within 20 feet of a power line during setup. Exceptions: de-energized and grounded power lines or use of a dedicated spotter or proximity alarms.
- Assembly/disassembly below power lines is prohibited, unless line is de-energized and grounded.
- All power lines are presumed to be energized unless confirmed to be de-energized by the utility owner/operator and visibly grounded at the worksite.
- All power lines presumed to be un-insulated.
- Employees shall understand limitations of insulating links, proximity alarms and range control devices, if used.
- Dedicated spotters shall be trained.
- There must be at least one electrocution hazard warning sticker conspicuously placed in the cab of the crane.



	<b>CARDINAL SURVEYS COMPANY</b> Safety Management System	Doc No:	CRANES
		Initial Issue Date:	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>		Revision Date:	01-07-2014
		Revision No.:	3
		Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page: Page 9 of 16

**Power Lines**

A pre-operation hazard assessment will be performed to identify the work zone and determine if any part of the equipment could reach closer than 20 feet to a power line. The work zone shall be identified by demarcating boundaries such as flag and range limiting devices, or defining the work zone as 360 degrees around the equipment up to the maximum working radius. The hazard assessment must determine if any part of the equipment could get closer than 20 feet to a power line.

Measures must be taken if it is determined that any part of the equipment, load line or load could get closer than 20 feet to a power line. If it is determined that any part of the equipment, load line or load could get closer than 20 feet to a power line then at least one of the following measures must be taken:

- Ensure the power lines have been deenergized and visibly grounded
- Ensure no part of the equipment, load line or load gets closer than 20 feet to the power line
- Determine the line's voltage and minimum approach distance permitted in Table A (below).


Voltage (kV)	Minimum Clearance Distance(feet)
Up to 50	10
50 to 200	15
200 to 350	20
350 to 500	25
500 to 750	35
750 to 1000	45
Over 1000	As established by the line owner

Some special requirements for working below power lines include training of operators and crew on:

- Procedures to follow after power line contact
- Danger of a potential energized zone
- Operator's emergency procedures
- Safest means to evacuate equipment
- Need for employees to avoid approach
- Safe clearance from power lines

**General Operational Procedures**


- Employees shall not be exposed to unsafe concentrations of toxic gases or oxygen deficient atmospheres when internal combustion engine powered equipment is used. Tests shall be conducted and documented.

	<b>CARDINAL SURVEYS COMPANY</b> Safety Management System		Doc No:	CRANES
			Initial Issue Date	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 10 of 16

- Do not engage in any practice that will divert your attention while operating the crane.
- Respond to signals only from the person who is directing the lift or any appointed signal person.
- Obey a stop signal at all times, no matter who gives it.
- Do not move a load over people.
- Operator will use signal person if operator's view is obstructed, or if the operator request signal person or if the job site requires a signal person.
- People shall not be placed in jeopardy by being under a suspended load.
- Do not work under a suspended load unless the load is supported by blocks, jacks, or a solid footing that will safely support the entire weight.
- Have a crane or hoist operator remain at the controls or lock open and tag the main electrical disconnect switch.
- Ensure that the rated load capacity of a crane's bridge, individual hoist, or any sling or fitting is not exceeded.
- Know the weight of the object being lifted.
- Check that all controls are in the OFF position before closing the main line disconnect switch.
- If spring-loaded reels are provided to lift pendants clear off the work area, ease the pendant up into the stop to prevent damaging the wire.
- Avoid side pulls. These can cause the hoist rope to slip out of the drum groove, damaging the rope or destabilizing the crane or hoist.
- To prevent shock loading, avoid sudden stops or starts. Shock loading can occur when a suspended load is accelerated or decelerated, and can overload the crane or hoist. When completing an upward or downward motion, ease the load slowly to a stop.

At the start of each work shift, the designated competent person operator shall do the following steps before making lifts with any crane or hoist:

- Test the upper-limit switch and slowly raise the unloaded hook block until the limit switch trips.
- Visually inspect the hook, load lines, trolley, and bridge as much as possible from the operator's station; in most instances, this will be the floor of the building.
- If provided, test the lower-limit switch.
- Test all direction and speed controls for both bridge and trolley travel.
- Test all bridge and trolley limit switches, where provided, if operation will bring the equipment in close proximity to the limit switches
- Test the pendant emergency stop.
- Test the hoist brake to verify there is no drift without a load.
- If provided, test the bridge movement alarm.
- Lock out and tag for repair any crane or hoist that fails any of the above tests.
- Any deficiencies shall be repaired, or defective parts replaced, before continued use.

	<b>CARDINAL SURVEYS COMPANY</b> Safety Management System		Doc No:	CRANES
			Initial Issue Date:	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.:	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 11 of 16

### Moving a Load


- Center the hook over the load to keep the cables from slipping out of the drum grooves and overlapping, and to prevent the load from swinging when it is lifted.
- Inspect the drum to verify that the cable is in the grooves.
- Use a tag line when loads must traverse long distances or must otherwise be controlled.
- Manila rope may be used for tag lines.
- Plan and check the travel path to avoid personnel and obstructions.
- Lift the load only high enough to clear the tallest obstruction in the travel path.
- Start and stop slowly.
- Land the load when the move is finished.
- Choose a safe landing area.
- Never leave suspended loads unattended
- In an emergency where the crane or hoist has become inoperative, if a load must be left suspended, barricade and post signs in the surrounding area, under the load, and on all four sides.
- Lock open and tag the crane or hoist's main electrical disconnect switch.

### Parking a Crane or Hoist

- Remove all slings and accessories from the hook.
- Return the rigging device to the designated storage racks.
- Place the emergency stop switch (or push button) in the OFF position.

### Rigging and Sling Inspections and Safety Requirements

- Only select rigging equipment that is in good condition.
- All rigging equipment shall be inspected annually; defective equipment is to be removed from service and destroyed to prevent inadvertent reuse.
- The load capacity limits shall be stamped or affixed to all rigging components.
- All devices shall be visually inspected prior to use and removed from service for any of the following conditions:
  - Nylon slings with:
    - Abnormal wear.
    - Torn stitching.
    - Broken or cut fibers.
    - Discoloration or deterioration.

	CARDINAL SURVEYS COMPANY Safety Management System		Doc No:	CRANES
			Initial Issue Date	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 12 of 16


- Wire rope slings with:
  - Kinking, crushing, bird caging, or other distortions.
  - Evidence of heat damage.
  - Cracks, deformation, or worn end attachments.
  - Six randomly broken wires in a single rope lay.
  - Three broken wires in one strand of rope.
  - Hooks opened more than 15% at the throat.
  - Hooks twisted sideways more than 10 degrees from the plane of the unbent hook.
- Alloy steel chain slings with:
  - Cracked, bent, or elongated links or components.
  - Cracked hooks.
  - Shackles, eye bolts, turnbuckles, or other components that are damaged or deformed.

### Rigging a Load

- Determine the weight of the load - do not guess.
- Determine the proper size for slings and components.
- Do not use manila rope for rigging.
- Ensure that shackle pins and shouldered eyebolts are installed in accordance with the manufacturer's recommendations.
- Ensure that ordinary (shoulderless) eyebolts are threaded in at least 1.5 times the bolt diameter.
- Use safety hoist rings (swivel eyes) as a preferred substitute for eye bolts wherever possible.
- Pad sharp edges to protect slings.
- Remember that machinery foundations or angle-iron edges may not feel sharp to the touch but could cut into rigging when under several tons of load.
- Wood, tire rubber, or other pliable materials may be suitable for padding.
- Do not use slings, eyebolts, shackles, or hooks that have been cut, welded, or brazed.
- Install wire-rope clips with the base only on the live end and the U-bolt only on the dead end.
- Follow the manufacturer's recommendations for the spacing for each specific wire size.
- Determine the center of gravity and balance the load before moving it.
- Initially lift the load only a few inches to test the rigging and balance.

Cranes or hoists shall not be loaded beyond their rated capacity for normal operations.

- Any crane or hoist suspected of having been overloaded shall be removed from service by locking open and tagging the main disconnect switch.
- Overloaded cranes shall be inspected, repaired, load tested, and approved for use before being returned to service.

	CARDINAL SURVEYS COMPANY Safety Management System		Doc No:	CRANES
			Initial Issue Date:	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.:	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 13 of 16

Working at heights on cranes or hoists:

- Anyone conducting maintenance or repair on cranes or hoists at heights greater than 6 ft (1.8 m) shall use fall protection.
- Fall protection includes safety harnesses that are fitted with a lifeline and securely attached to a structural member of the crane or building.
- Properly secured safety nets are another option for fall protection.
- Use, of a crane, as a work platform should only be considered when conventional means of reaching an elevated worksite are hazardous or not possible.
- Workers shall not ride a moving bridge crane.
- Personnel shall not board any bridge crane unless the main disconnect switch is locked and tagged out of service.

Signals to the operator shall be in accordance with the standard hand signals prescribed by the applicable ANSI standard for the type of crane in use unless voice communications equipment (telephone, radio, or equivalent) is used.

- Signals shall be discernible or audible at all times.
- Some special operations may require addition to or modification of the basic signals.
- For all such cases, these special signals shall be agreed upon and thoroughly understood by both the person giving the signals and the operator, and shall not be in conflict with the standard signals.


All maintenance, tests and inspections shall be conducted in accordance with the manufacturer's recommendations.

All records of annual and load testing shall be retained at the facility where each crane, hoist or other equipment covered by this program is located. All maintenance and repair records shall be retained for the life of the equipment.

The use and operation of client owned cranes, hoists and rigging equipment by qualified CARDINAL SURVEYS COMPANY personnel will occur only at the express permission of the designated client representative.

An accessible fire extinguisher of 5BC rating, or higher, shall be available at all operator stations or cabs of equipment.

When operating cranes near power lines rated 50 KV or below, minimum clearance between the power line and any part of the crane or load shall be 10 feet.


	CARDINAL SURVEYS COMPANY Safety Management System		Doc No:	CRANES
			Initial Issue Date	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 14 of 16

### Training:

---

Training shall include:

- Documentation of employee, date of training and subject matter, including method used to test knowledge of material.
- No employee shall operate cranes or equipment covered by this program until training has been complete and management has approved and designated him or her as a qualified operator.

	CARDINAL SURVEYS COMPANY Safety Management System		Doc No:	CRANES
			Initial Issue Date:	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.:	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 15 of 16

## OVERHEAD CRANE AND HOIST INSPECTION PROCEDURES

Inspections can be classified as either "frequent" or "periodic" based upon the intervals at which the inspections must be performed.

### Frequent


Frequent inspection — daily: The following shall be inspected for defects as noted.

- All functional operating mechanisms for maladjustment interfering with proper operation.
- Daily — must be performed by operator. (no documentation required)
- Deterioration or leakage in lines, tanks, valves, drain pumps, and other parts of air or hydraulic systems.
- Hooks with deformation or cracks. Hooks with cracks or having more than 15% in excess of normal throat opening or more than 10 degrees twist from the plane of the unbent hook should be discarded.
- Wire rope and nylon sling inspection

Daily inspections are to be conducted by the equipment operator. These inspections are visual inspections made daily when the overhead crane is used and record keeping is not required.

### Periodic inspection

Annual: The annual inspection shall be performed and documented by a qualified third party. Records shall be kept at the location of the completed inspection.

	CARDINAL SURVEYS COMPANY Safety Management System		Doc No:	CRANES
			Initial Issue Date	2-10-2011
<b>MOBILE CRANES - ONSHORE</b>			Revision Date:	01-07-2014
			Revision No.	3
			Next Revision Date:	
Preparation: Safety Mgr	Authority: President	Issuing Dept: Safety	Page:	Page 16 of 16

### DAILY GUIDE FOR OVERHEAD CRANE INSPECTIONS

Yes	No	All functional operating mechanisms for maladjustment interfering with proper operation
Yes	No	Leakage in lines, tanks, valves, drain pumps, and other parts of air or hydraulic systems
Yes	No	Hooks for deformation, chemical damage, or cracks. Hooks having more than 15% in excess of normal throat opening or more than 10 degrees twist from the plane of the unbent hook.
Yes	No	Hooks. Dye penetrant, magnetic particle, or other suitable crack-detecting inspection performed at least once a year.
Yes	No	All functional operating mechanisms for excessive wear of components
Yes	No	Rope reeving for noncompliance with manufacturer's recommendations
Yes	No	Condition of wire rope.
Yes	No	Deformed, cracked, or corroded members
Yes	No	Cracked or worn sheaves or drums.
Yes	No	Loose bolts, nuts, or rivets
Yes	No	Worn, cracked, or distorted parts such as pins, bearings, shafts, gears, rollers, locking and clamping devices
Yes	No	Excessive wear in brake system parts, linings, pawls, and ratchets
Yes	No	Load, wind and other indicators over their full range, for any significant inaccuracies
Yes	No	Gasoline, diesel, electric, or other power plants for improper performance or noncompliance with applicable safety requirements.
Yes	No	Electrical apparatus, for signs of pitting or any deterioration of controller, master-switches, and push button stations.
Yes	No	Required warning labels absent or illegible.
Yes	No	Supporting structure, trolley and bridge for alignment and continued ability to support the imposed loads.